Machine operation

Additional information (including troubleshooting and service) can be found in the individual chapters of the instructions for use.

Sort laundry according to care symbols

Do not tumble dry

Suitable for tumble drying - at low temperatures

Suitable for tumble drying

Sort by:

Material thickness: Whenever there is greater load than the dryer can handle, separate laundry according to weight (e.g. dry towels and thin underwear separately).

Type of material: Cotton (linen); synthetic textiles (easy care).

Degree of drying: Cupboard dry, iron dry etc.

Do not tumble dry: Woollens, silk, nylon stockings, delicate embroidery, fabrics with metallic decorations, bulky items such as sleeping bags, etc.

Preparing laundry

Check that all fastenings are closed and that pockets are empty. Please ensure that there are no cigarette lighters in the wash. Turn laundry inside out.

Opening door

Pull the door handle.

Loading dryer

Place laundry loosely in the drum to achieve equal drying throughout.
Then close the door.

Selecting programme

Select the drying programme required by turning the programme selector knob (for information, refer to programme table).

Selecting options (if available)

Select the option required by pressing the corresponding button.
The indicator lamp above the relevant button lights up to confirm your selection.
A fast blinking led indicates a wrong selection is made (incompatible options).
Press the button again to cancel the option.

Starting dryer

The drying programme is started by pressing the **"Start (Pause)"** button.
The relevant indicator lamp lights up.
Changing programme selection: If the programme selected is changed during drying, the dryer stops. The **"Start (Pause)"** indicator lamp flashes. To operate the new programme, again press the **"Start (Pause)"** button.
Interrupting programme: To interrupt a drying cycle, press the **"Start (Pause)"** button and open the door. Wait at least 5 minutes, to allow the laundry to cool down, before you unload the dryer. For your safety the drying cycle stops automatically if you open the door. To restart, after door opening, close the door and press the **"Start (Pause)"** button again.
Warning: Never stop a tumble dryer before the end of the drying cycle, unless all items are quickly removed and spread out so that the heat is dissipated.

Programme end - unloading dryer

The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.

End: Take the laundry out of the dryer. The drying process is complete and the anti-crease phase has been reached (active).

Anti-Crease: If the laundry is not removed at the end of the drying cycle, an automatic anti-crease cycle will operate for maximum 15 min. The drum rotates at regular intervals to prevent the laundry from creasing.

Switching dryer off

Set the programme selector knob to "Off" " O ".

Cleaning the lint filter: Open door, pull lint filter up and out of machine and open it. Brush lint using a soft brush or your fingertips. Push lint filter firmly back into place.

For your safety: Only use additives/plastic items specified as dryer safe. Rinsed items that have been treated with stain remover thoroughly in plenty of water before drying. Never dry rubber objects or objects stained with vegetable oils in the dryer.

PROGRAMME OVERVIEW					OPTIONS			Approximate drying times (in minutes)	
Drying level				Volume of load in kg	Gentle	Buzzer	Start delay	Very wet load	Wet load
	extra **EXTRA DRY**	Multi-layered, thick laundry such as: terry towels, dish cloths and dry towels, bed linen, underwear, terry towelling bath robes.	Normal temperature Max. 8 kg	3.0 8.0	X	X	X	85’ 180’	70’ 160’
	CUPBOARD DRY PLUS	Multi-layered, thick laundry such as: terry towels, dish cloths and dry towels, bed linen, underwear, terry towelling bath robes.		3.0 8.0	X	X	X	80’ 165’	60’ 140’
	CUPBOARD DRY	Similar types of laundry which do not require ironing such as: dry towels, bed linen, underwear, baby clothes, T-shirts, cotton socks.		3.0 8.0	X	X	X	70’ 150’	50’ 125’
	IRON DRY	Laundry which requires ironing such as: bed and table linen, dry towels, T-shirts, polo shirts, work clothes.		3.0 8.0	X	X	X	50’ 125’	45’ 100’
	extra **EXTRA DRY**	Laundry with thick, multi-layered areas: bed and table linen, track suits, blankets.	Low temperature Max. 4 kg	1.0 4.0	X	X	X	25’ 75’	25’ 60’
	CUPBOARD DRY PLUS	Laundry with thick, multi-layered areas: bed and table linen, track suits, blankets.		1.0 4.0	X	X	X	25’ 70’	20’ 60’
	CUPBOARD DRY	Laundry which does not require ironing such as: shirts, blouses, T-shirts, sportswear.		1.0 4.0	X	X	X	20’ 60’	15’ 55’
	IRON DRY	Laundry which requires ironing such as: trousers, dresses, skirts, shirts, blouses.		1.0 4.0	X	X	X	15’ 55’	10’ 50’

How to proceed if...

...you want to correctly care for and clean your dryer:

Clean the filter at the end of every cycle. →

- Open the door.
- Pull the filter upwards.
- Brush lint using a soft brush or your fingertips.
- Push the filter back into place.

Please de-install once a year the air hose and remove the lint inside.

...you want to check the dryer yourself first:

(If your machine is not functioning correctly, please check the following points before phoning for the customer service – also refer to relevant chapter in the instructions for use).

Drying takes too long laundry is not dry enough. →

- Has the correct drying programme been selected?
- Was the inserted laundry too wet (washing machine spin speed less than 1000 rpm?)
- Is the lint filter dirty (filter indicator light on)?
- Is the room temperature too high?
- Are the "End" "▷|" and "Anticrease" "" indicator lamps lighting up? The drying cycle is complete and the laundry can be taken out.
- If the drying result does not meet your expectation, select a more dry programme.

The dryer will not operate (after a power failure, always press the "Start (Pause)" button). →

- Is the plug properly inserted into the mains electricity socket?
- Is there a power failure?
- Has the fuse blown?
- Is the door properly closed?
- Has a drying programme been selected?
- Has the **"Start (Pause)"** button been pressed?
- Has the start delay option been selected ?
- Is the dryer overloaded? Please remove a part of the load.

Lint filter indicator lamp on. →

- Is the lint filter clean?
- Is the vent hose blocked?
- Is the outside vent hose adaptor blocked?

AFTER-SALES SERVICE

If the fault is still present once the above checks have been undertaken or should the fault occur for a second time, switch the machine off. Please contact your after-sales service representative (for more information, refer to the warranty manual).

Please have the following details ready when calling your after-sales service representative:

- The nature of the fault.
- The dryer type and model.
- The service code (the number after the word Service on the adhesive rating plate) on the right-hand side when the door is open.

SERVICE 0000 000 00000

Before using the machine, please also read the instructions for use carefully!

AWZ 8000/PRO Quick Reference Guide

GB

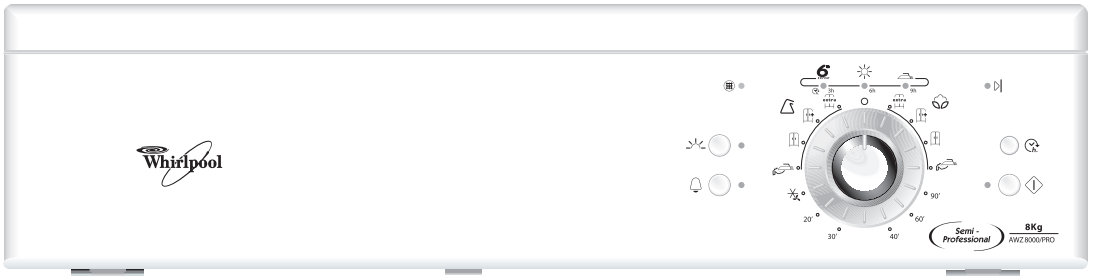

Programme selector knob

The drying programme is selected by turning this knob.

"Start (Pause)" button

The drying programme is started by pressing this button. The indicator lamp flashes during the selection phase and lights up during drying.

Indicator lamps

Filter

The indicator lamp lights up when the filter needs cleaning.

Clean the filter at the end of every cycle.

Overdry protection

The indicator lamp lights up when a humidity controlled program is selected, to indicate the working protection function. Function is not active in time controlled programmes 20', 30', 40', 60', 90' and "Airing" "".

Programme sequence



Overdry protection | **Drying** | **Anti-crease** | **End of cycle**

Options

Gentle

Reduces drying intensity (recommended for delicate items).

Buzzer

Signals/sounds end of drying cycle.

Delayed Start

Delays the start of the drying cycle by 3 to 9 hours. Each time the button is pressed, the start time is delayed by 3 hours.

Then press the **"Start (Pause)"** button to confirm the final selection and to start the dryer. The delayed start indicator lamp flashes and the countdown counts down in 1-hour intervals. The countdown is indicated by the indicator lamp. During the countdown, the drum will turn from time to time to re-distribute the laundry. To cancel or change the previously set time delay, set the programme selector knob to "Off" "O" or open the door.

Whirlpool is a registered trademark of Whirlpool USA

5019 307 01538
(Subject to technical modifications)

Failure codes

In case of a malfunction of the appliance, a failure indication is shown or some LED lights are blinking: (depending on the dryer model you have, the failure is displayed in letters or by different layouts of blinking LED lights)

Message displayed		Check needed by customer before Service call
F02		Turn OFF the dryer. Unplug the dryer for more than 3 seconds. Plug the dryer and start a new cycle with humid laundry. If the problem persists, please call Customer Service.
F05		Turn OFF the dryer. Unplug the dryer for more than 3 seconds. Clean the lint filter. Check if the ambient temperature is more than 5°C. Plug the dryer. Start a new cycle with humid laundry. If the problem persists, please call Customer Service.
F06		Turn OFF the dryer. Unplug the dryer. Empty the bottle. Clean the fluff filter. Plug the dryer. Start a new cycle with humid laundry. If the problem persists, please call Customer Service.
F13		Turn OFF the dryer. Remove the load. Start the cycle again. If the cycle starts, the dryer was overloaded. Stop the dryer and re-load it again with half amount of laundry. If the failure indication occurs again, please call Customer Service.
F14		Turn OFF the dryer. Unplug the dryer. Call the Customer Service.
F15		Turn OFF the dryer. Turn ON the dryer and restart the same programme as before. If the same failure occurs again, turn OFF the dryer. Unplug the dryer. Call the Customer Service.

LED is not blinking

LED is on or blinking

AFTER-SALES SERVICE

If the fault is still present once the above checks have been undertaken or should the fault occur for a second time, switch the machine off. Please contact your After-Sales service representative (for more information, refer to the warranty manual).

Please, have the following details ready when calling your after-sales service representative:

- The nature of the fault.
- The dryer type and model.
- The service code (the number after the word Service on the adhesive rating plate) on the right-hand side when the door is open.

If the dryer appears damaged or defective, unplug the appliance and contact the machine owner for contacting our After-Sales Service.

CONTENTS

QUICK REFERENCE GUIDE

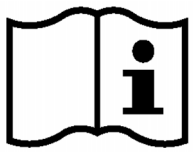

PROGRAMME CHART

- PREPARING THE LAUNDRY
- SELECTING A PROGRAMME AND OPTIONS
- STARTING AND COMPLETING A PROGRAMME
- CHANGING A PROGRAMME
- INTERRUPTING A PROGRAMME
- DAILY MAINTENANCE AND CLEANING

INSTRUCTIONS FOR USE

BOOKLET

- DEFINITION OF USE Page 12
- INSTALLATION Page 12
- TRANSPORT AND HANDLING Page 13
- DESCRIPTION OF THE DRYER Page 13
- VENT CONNECTION Page 14
- DOOR REVERSIBILITY Page 15
- SETUP THE DRYER Page 16
- ELECTRICAL CONNECTION Page 17
- SAFETY ADVICES Page 18
- GENERAL RECOMMENDATIONS Page 19
- GENERAL INFORMATION / DISPOSAL Page 19
- MAINTENANCE AND CLEANING Page 20
- AFTER-SALES SERVICE Page 20

DEFINITION OF USE

- The dryer is exclusively destined to dry dryable laundry in quantities which are recommended in the PROGRAMME CHART.
- Observe the instructions given in this instruction for use and the programme chart before using the dryer.
- Keep the instruction for use and the programme chart. If you pass on the dryer to another person, also give him/her the instructions for use and the programme chart.
- The manufacturer declines all liability for damage to property or injury to persons or animals due to non-compliance with the directions given in this instruction for use.

INSTALLATION

1. Removing the packaging and check

- After unpacking, make sure that the dryer is undamaged. If in doubt, do not use the dryer. Contact After-Sales Service or your local retailer.
- If the appliance was exposed to the cold prior to delivery, keep it at room temperature for a few hours before operating.
- Do not operate the dryer if it has been damaged during transport. Contact one of our After-Sales Service technicians.

2. Electrical Connections

- Electrical connections must be carried out by a qualified technician in compliance with the manufacturer's instructions and current standard safety regulations.
- Electrical connection must comply with local Electricity Board regulations.
- Voltage information, power consumption and the required fuse protection is shown on the rating plate mounted at the rear of the dryer.
- The dryer must be earthed as prescribed by law.
- Before any maintenance on the dryer disconnect it from the mains supply.
- Mains cable replacement is only to be carried out by After-Sales-Service.
- After installation access to the mains plug has to be guaranteed or the all-pole disconnection has to be possible with a switch, in order to assure an immediate deactivation of the dryer in case of emergency.
- The replacement of the light bulb is only to be carried out by the After-Sales-Service.

3. Installation

- This appliance is equipped with an automatic detection system which stops the heating if there is no laundry in the drum.
- Do not install your dryer where it can be subject to extreme condition, such as: poor ventilation, temperature below 5°C or above 35°C.
- The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer, in such a way, that a full opening of the tumble dryer door is restricted.
- The exhaust-air must not be leaded into a air-outlet conduit which is used for heating appliances fired with gas, oil or solid fuel.
- Pay attention that the air-inlet openings are unobstructed.
- Take care not to install the dryer on a deep pile carpet.
- Take care not to trap the mains cable between the dryer and the wall.
- When installing the dryer always carefully level the dryer adjusting the two feet and check the correct leveling with a spirit level.
- If the dryer has to be installed due to lack of space directly next to a gas or coal stove, a heat insulating plate (85 x 57 cm) has to be installed in between, whose side against the stove has to be covered with aluminum foil.

TRANSPORT AND HANDLING

For moving the dryer, use a sack barrow on the rear of the dryer to lift it. This requires at least 2 persons.

Never lift the appliance by the worktop when transporting.

- Pull out the mains plug.
- Check if the dryer door is properly closed.
- Disconnect the vent hose from the adapter.
- Disconnect the adapter from the dryer.

DESCRIPTION OF THE DRYER

A. Work top

B. Contact pin

C. Door:

To open the door, pull the handle.

To close the door, push gently until closed.

D. Filter

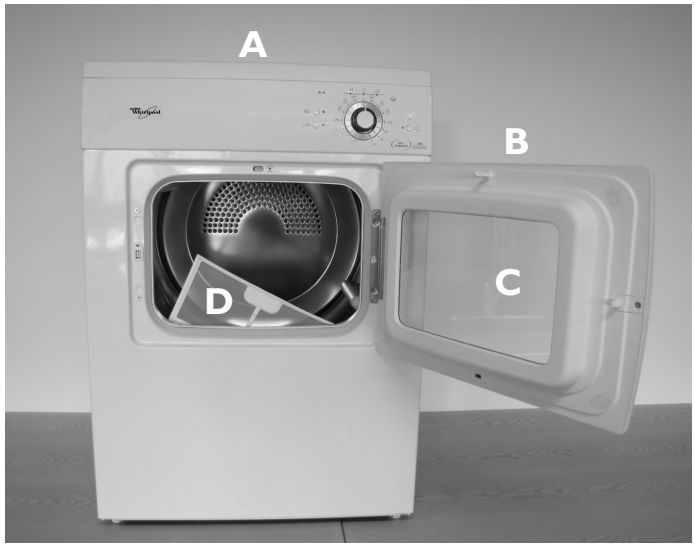

VENT CONNECTION

Installing the Vent hose

A. Place a towel or the packaging material on the right-hand side next to the dryer.

B. Place the dryer on its right-hand side (seen from the front) on the towel or the packing material.

C. Push the adapter (see illustration) to the connection located under the dryer and make sure that the adapter is well fixed to the dryer.

D. Place the dryer back to his common position.

E. Connect the hose to the adapter and put the other end of the hose to an opening that will get outside.

F. In case the vent hose is connected outside, it is recommended to install a non return valve to avoid the cold air coming from the external side.

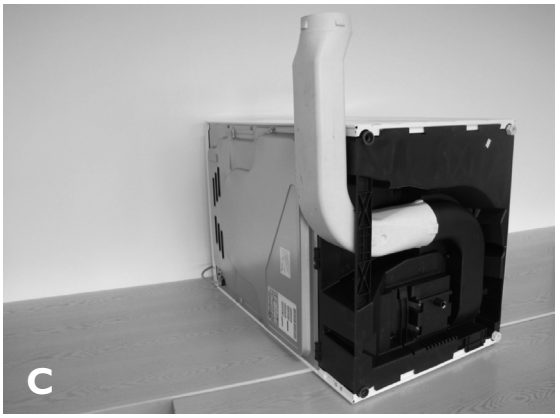

Venting outside

- Without kinking it, lead the vent hose outside (inside diameter 10 cm, maximum length with two bends 3 m).
- Ensure that the vent hose does not sag when stacking the dryer on a washing machine. It should only be placed horizontally or upwards.
- Do not connect to ventilation systems protected by fly nets. These can become clogged and cause malfunctioning of the dryer.
- Do not connect the air vent hose to a chimney or to a mechanical ventilation extractor duct.
- Do not connect the vent hose to the heating system. Only connect the hose to ventilation systems insulated against humidity.
- Please provide adequate ventilation to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.

IMPORTANT

- **A minimum distance of 10 cm between rear of appliance and the wall must be observed.**
- **Do not connect to ventilation systems protected by fly nets. These can become clogged and cause malfunctioning of the dryer.**

DOOR REVERSIBILITY

A. Unplug the dryer.

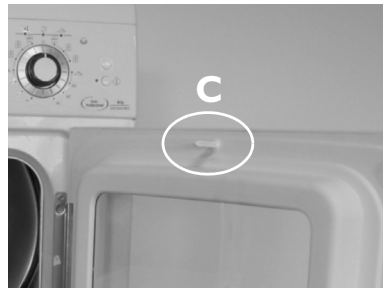

B. Open the door.

C. Using a spanner, turn the contact pin (**C**) in the upper part of the door through 90° and pull it out.

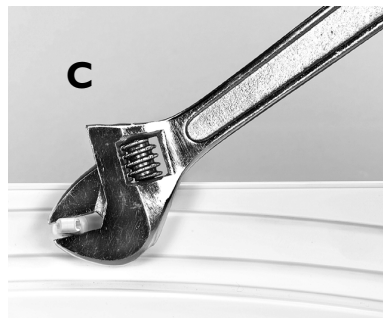

D. Removing the 2 door hinge screws, followed by the door.

E. Unscrew the 2 screws above and below the door lock system.

F. Removing the door lock: using a screwdriver, press down on the small rib in the upper opening and extract the door lock by pulling it towards you.

G. Reverse the door:

H. Fasten the door on the desired side using the 2 screws.

I. Insert the door lock system on the opposite and lock it securely.

J. Fix the 2 screws above and below the door lock system.

K. Replace the contact pin in the inside of the door (top).

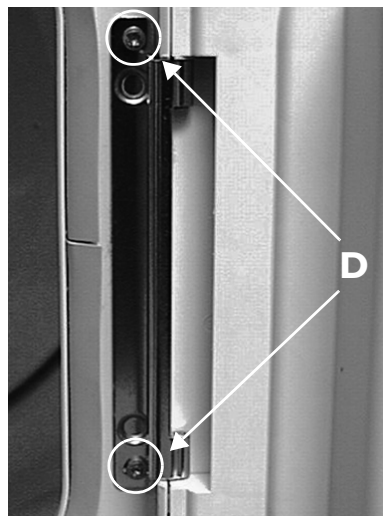

NOTE:
Use for the unscrewing a screw driver of the type “Torx T20”.

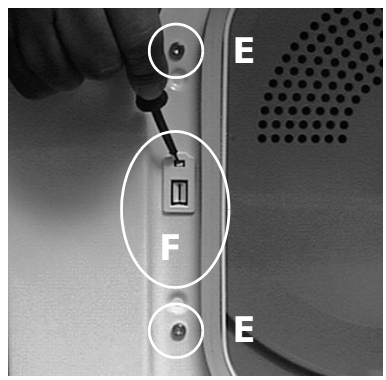

SETUP THE DRYER

- For security reason do not remove the worktop.
- Connect the dryer to an external ventilation system in order to prevent steam from damaging your furniture during the years.

Stacking kit

Depending on the model of your washing machine, your dyer can be stacked on top of your front loading washing machine. For further information please contact the After-Sales-Service.

Minimum housing dimensions:

Width: 600 mm

Height: 855 mm

Depth: 560 mm

Sound level

- Sound pressure level, LPA < 70 dB(A)
  (Kpa: +/-2,5 dB(A)

ELECTRICAL CONNECTION

1) For Great Britain only

Warning - this appliance must be earthed

Fuse replacement

If the mains lead of this appliance is fitted with a BS 1363A 13amp fused plug, to change a fuse in this type of plug use an A.S.T.A. approved fuse to BS 1362 type and proceed as follows:

1. Remove the fuse cover (**A**) and fuse (**B**).

2. Fit replacement 13A fuse into fuse cover.

3. Refit both into plug.

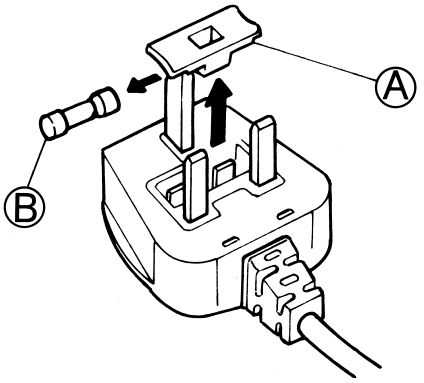

Important:

The fuse cover must be refitted when changing a fuse and if the fuse cover is lost, the plug must not be used until a correct replacement is fitted.

Correct replacements are identified by the colour insert or the colour embossed in words on the base of the plug.

Replacement fuse covers are available from your local electrical store.

2) For the Republic of Ireland only

The information given in respect of Greeat Britain will frequently apply, but a third type of plug and socket is also used, the 2-pin, side earth type.

3) Socket outlet / plug (valid for both countries)

If the fitted plug is not suitable for your socket outlet, please contact Whirlpool Service for further instruction. Please do not attempt to change the plug yourself. This procedure needs to be carried out by a qualified Whirlpool technician in compliance with the manufacturer's instructions and current standard safety regulations.

SAFETY ADVICES

- To minimize the risk of fire in a tumble dryer, the following should be observed.
- Oil-affected item can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the item can become hot enough to catch fire. Piling, stacking or storing oil-affected item can prevent heat from escaping and so create a fire hazard.
- Do not tumble dry unwashed items in the tumble dryer.
- Ensure that the appliance is maintained as shown in the chapter “Maintenance and cleaning”.
- Ensure that the appliance is installed per the description above.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers must be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Do not use inflammable cleaning agents.
- Do not use the tumble dryer if chemicals have been used for cleaning.
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads must not be dried in the tumble dryer.
- Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
- Remove all objects from pockets such as lighters and matches.
- Never use and store flammable materials nearby the dryer.
- Never stop a tumble dryer before the end of the drying cycle, unless all items are quickly removed and spread out so that the heat is dissipated.

- Attention rear panel can be hot.
- The dryer is appropriate for indoor use only.
- Do not use extension leads or multiple adaptors.
- If the dryer appears damaged or defective, unplug the appliance and contact the machine owner for contacting our After-Sales Service.

- The drum surface can be hot. Users have to act with caution during loading and unloading.
- **Pay attention:** The appliance must be disconnected from power source during service and replacing parts. If the removal of the plug is intended the plug must always remain inside of the operator’s visual field. If this is not possible, install a disconnection with a locking system in the isolated position.

User and child protection

- Children must not be allowed to play with the dryer.
- Ensure that children or small animals can not get into the drum.
- Keep the packaging materials (plastic bags, polystyrene parts, etc.) out of reach of children, as they are potentially dangerous.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

GENERAL RECOMMENDATIONS

- Always set the programme/time selector knob to the “0” position after use. This prevents the dryer from being switched on accidentally.
- Before cleaning or carrying out maintenance switch off the dryer and disconnect it from the mains supply.
- To clean the outside of the dryer, use a neutral detergent and a damp cloth.
- Do not use abrasive detergents.
- The final phase of a drying cycle always occurs without heat (cool down phase) to ensure that the items are left at a temperature that ensures that the items will not be damaged. Interrupting the cool down phase is not allowed.
- Wipe away lint from the door seal and the door using a damp cloth.
- If the lint filter mesh is clogged clean it with water and a soft brush.
- Since lint can go through the filter it is necessary to clean from time to time the complete filter area (including below the filter) with a brush, damp cloth or with a vacuum cleaner.

The Manufacturer is not liable for any damage to laundry resulting from inadequate or incorrect fabric care instructions which have been provided with the garment or article.

GENERAL INFORMATION / DISPOSAL

Packing

- The packing box may be fully recycled as confirmed by the recycling symbol.
- By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

Disposing of packaging and old Dryer:

- The dryer is built from reusable materials. The dryer must be disposed of in compliance with local waste disposal regulations.
- Before scrapping cut off the power cable so that the dryer cannot be connected to the mains.
- The symbol on the product or on the documents accompanying the product indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal.
- For more detailed information about treatment, recovery and recycling of this product please contact your local city office, your household waste disposal service or the shop where you purchased the product. ·

Energy saving tips

- Always dry a full load: depending on the type of laundry and the programme/drying time. For more detailed information, see the programme chart.
- By preference use the maximum spin speed allowed by your washing machine, since draining the water mechanically requires less energy. You will save time and energy when running your drying cycle.
- Do not overdry the laundry.
- Clean the lint filter after every drying cycle.
- Place your dryer in a room with a temperature between 15°C and 20°C. In case of higher temperature ventilate the room, e.g. open the window.
- Always select the correct programme/drying time for the load in order to obtain the desired drying results.
- Select the gentle option only with small loads.
- When drying cotton, for example dry iron dry and cupboard dry loads together. Start with the iron dry programme/ drying time setting, remove the laundry to be ironed at the end of that cycle and dry the remainder of the load on the cupboard dry setting.
- Set the programme selector knob always to the "0" position after the end of the cycle.

MAINTENANCE AND CLEANING

EACH DRYING CYCLE

- **Clean the lint filter at the end of every drying cycle.**
  Open the door.
  Pull the filter upwards.
  Remove lint using a soft brush or your fingertips.
  Push the filter back into place.

EACH THREE MONTHS

- **Clean vent hose and connection regularly to avoid blockage due to lint or foreign objects.**

AFTER-SALES SERVICE

Before contacting the After-Sales Service:

- Try to remedy the problem yourself (see "Troubleshooting Guide").
- Restart the programme to check whether the problem has solved itself.
- If the dryer continues to function incorrectly, call our authorised After-Sales Service.
- Use only authorised spare parts in the event of failure.
- The appliance must be disconnected from power source during service and replacing parts. If the removal of the plug is intended the plug must always remain inside of the operator's visual field. If this is not possible, install a disconnection with a locking system in the isolated position.

If, after carrying out the above checks and the "Troubleshooting Guide" the malfunction persists or appears again, turn the dryer off and call the After-Sales Service.

The After-Sales Service phone numbers and addresses are given on the guarantee card. Alternatively, consult the dealer where you purchased the appliance.

Please specify:

- The nature of the fault.
- The dryer type and model.
- The service code (the number after the word Service on the adhesive rating plate) on the lower side of the door opening.
- Your full address and phone number.

SERVICE 0000 000 00000

Manufactured by:	**Bauknecht / Whirlpool** **Bauknecht Hausgeräte GmbH** **Gottlob Bauknecht Straße 1-11** **73614 Schorndorf**
Approval Type **E 405 P** Tumbledryer (Airvented)	